

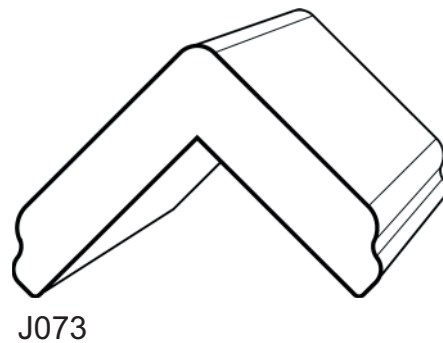
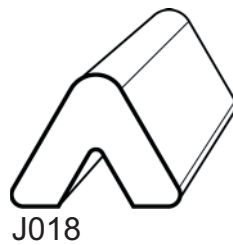
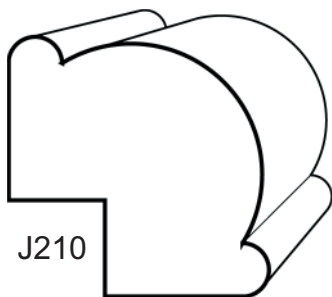
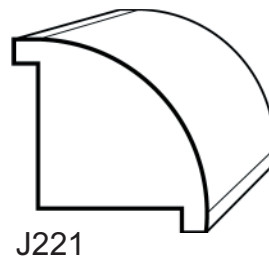
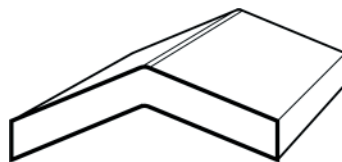
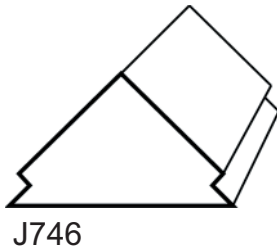
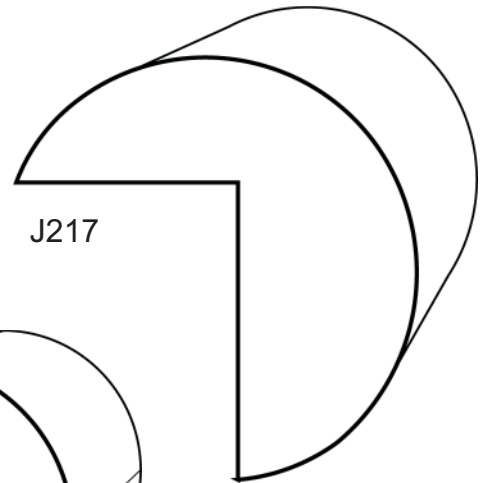
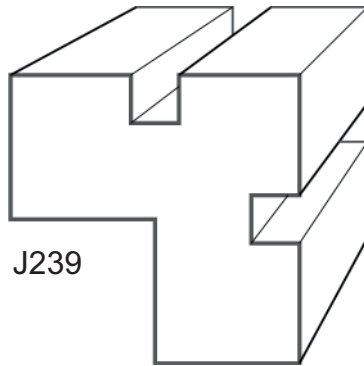
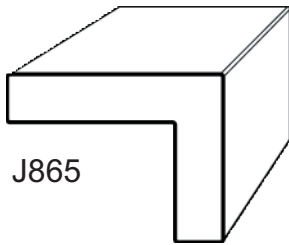
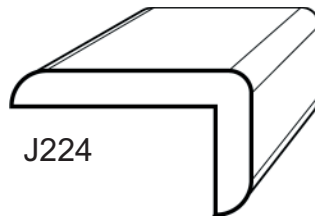
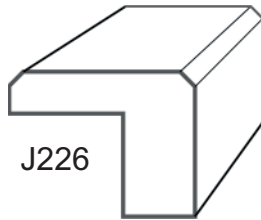
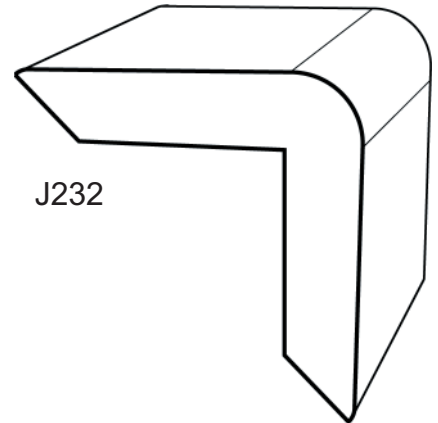
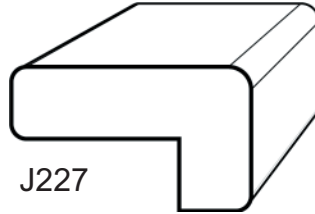
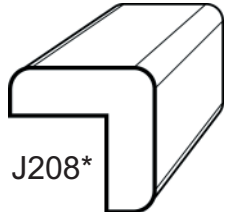
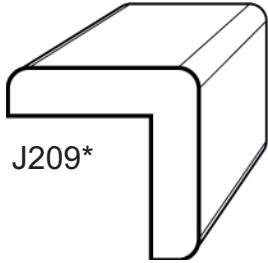
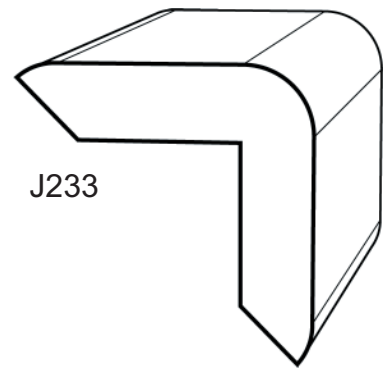
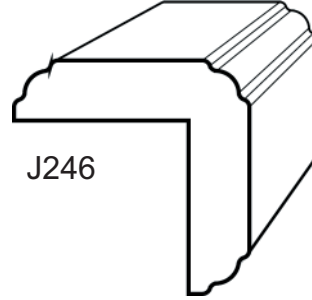
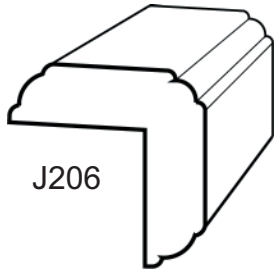



WOOD MOLDING

Corner Moldings

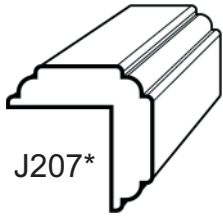


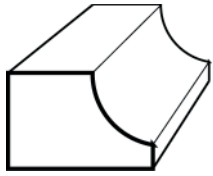


J278

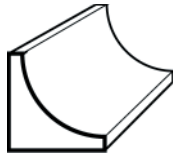


J201*

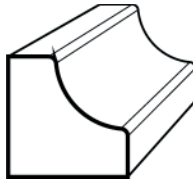


J213

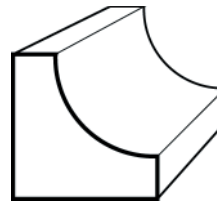


J202*

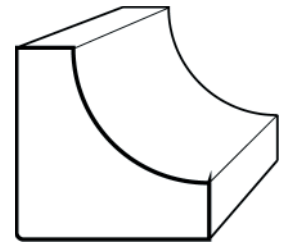


J146

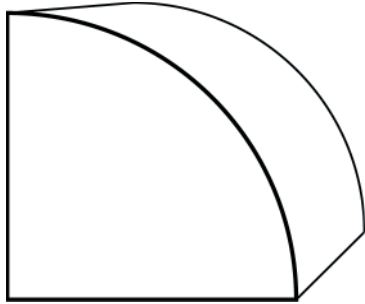


J215

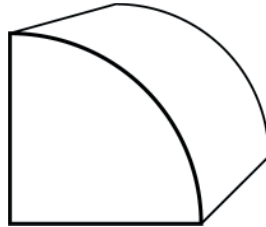


J1000

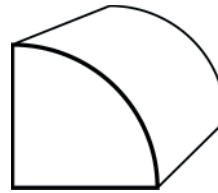


J204*

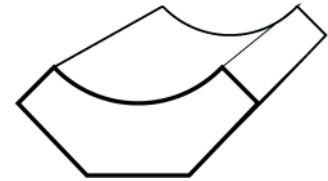


J1001

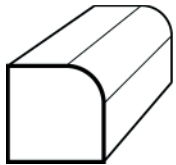


J230

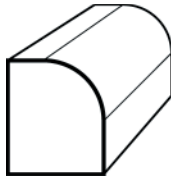


J229

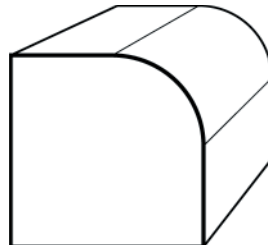


J228

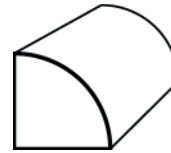


J203*

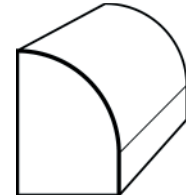


J214*

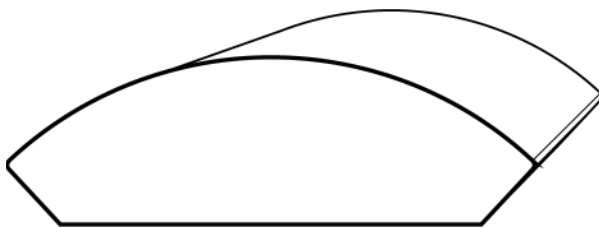


J029

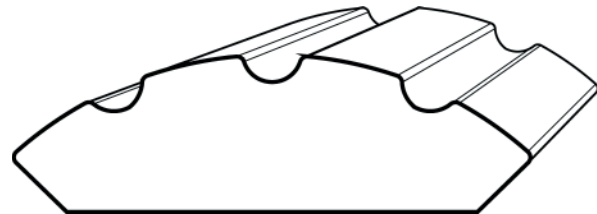


J216

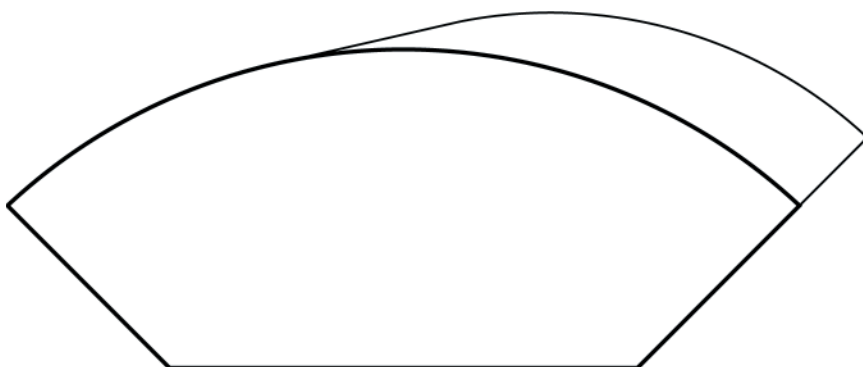

J219

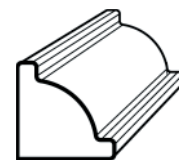

J205

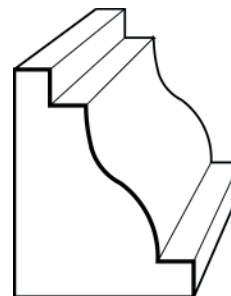

J175